

# FURUNO

## OPERATOR'S MANUAL

INTERFACE UNIT

---

**MODEL** IF-5000/5001

---



**FURUNO ELECTRIC CO., LTD.**  
NISHINOMIYA, JAPAN

©FURUNO ELECTRIC CO., LTD.

9-52, Ashihara-cho,  
Nishinomiya, Japan 662

Telephone: 0798-65-2111  
Telefax: 0798-65-4200 (G111)

All rights reserved. Printed in Japan

•Your Local Agent/Dealer

Initial : MAR 1982  
N : JAN. 27, 1997

(KAOK)

PUB. No. OME-42740  
IF-5000/5001



\* 0 0 0 8 0 6 7 3 5 0 0 \*



# SAFETY INSTRUCTIONS

"**DANGER**", "**WARNING**" and "**CAUTION**" notices appear throughout this manual. It is the responsibility of the operator of the equipment to read, understand and follow these notices. If you have any questions regarding these safety instructions, please contact a FURUNO agent or dealer.

The level of risk appearing in the notices is defined as follows:



## DANGER

This notice indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



## WARNING

This notice indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



## CAUTION

This notice indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury, or property damage.

## **WARNING**



**Do not open the equipment.**

Hazardous voltage which can cause electrical shock, burn or serious injury exists inside the equipment. Only qualified personnel should work inside the equipment.

**Do not disassemble or modify the equipment.**

Fire, electrical shock or serious injury can result.

**Turn off the power immediately if water leaks into the equipment or the equipment is emitting smoke or fire.**

Continued use of the equipment can cause fire or electrical shock.

**Do not place liquid-filled containers on the top of the equipment.**

Fire or electrical shock can result if a liquid spills into the equipment.

**Do not operate the equipment with wet hands.**

Electrical shock can result.

**Keep heater away from equipment.**

Heat can alter equipment shape and melt the power cord, which can cause fire or electrical shock.

## **CAUTION**

**Use the proper fuse.**

Use of a wrong fuse can result in fire or permanent equipment damage.

**Do not use the equipment for other than its intended purpose.**

Personal injury can result if the equipment is used as a chair or stepping stool, for example.

**Do not place objects on the top of the equipment.**

The equipment can overheat or personal injury can result if the object falls.

## **\* \* \* C O N T E N T S \* \* \***

### **SPECIFICATIONS OF IF-5000/IF-5001 INTERFACE UNIT**

#### **Page**

- |                                |   |
|--------------------------------|---|
| 1. Specifications              | 1 |
| 2. Data Flow in Interface Unit | 2 |
| 3. Complete Set                | 3 |
| 4. Installation Materials      | 3 |

### **OPERATION**

- |                         |   |
|-------------------------|---|
| 1. Mode Selection on J5 | 4 |
| 2. Selfcheck            | 5 |

### **INSTALLATION**

- |  |   |
|--|---|
| 1. Mounting of IF-5000 (Separate type)                 | 6 |
| 2. Fitting of IF-5001 (Built-in type) in Printer FP-70 | 6 |
| 3. Fabrication of Data Cable                           | 7 |
| 4. Connections   | 7 |

### **OUTLINE DRAWINGS**

D-1 to D-2

### **SYSTEM DIAGRAMS**

S-1 to S-2

### **CABLING DIAGRAMS**

S-3 to S-9

### **SCHEMATIC DIAGRAM**

S-10

## SPECIFICATIONS OF IF-5000/5001 INTERFACE UNIT


The interface unit IF-5000/5001 takes in various navigational data from the satellite navigator, loran coordinator, Decca coordinator, water temperature indicator, echosounder, current indicator, etc., and arranges them in series Communication Interface Format so that the complex data can be transferred to external devices such as X-Y plotter, Video Plotter, Remote Display, etc. Two types of interface units are available; one is a separate type with independent chassis (IF-5000) and the other is a built-in type (IF5001) which can be fitted in Printer FP-70.

### Characteristics

1. Input Data: Two dual way input terminals for Sat/Nav FSN-20/21/70, loran LC-30/70, Decca Navigator with L/L coordinator DP-80C, Color Video Sounder (Depth) FCV-series, and one single way input terminal for Water Temperature Indicator TI-10D/11D, Current Indicator CI-20/30.
2. Output Data: Time, Position in Lat/Long, Loran TD, Speed and Course of Ship, Range and Bearing to Destination or Waypoint, Water Temperature, Water Depth, Direction and Speed of Current at desired Water Depth.  
Two CIF data output terminals and one Printer output terminal are provided. Multi-distributer MD-300 is required for more than two CIF external devices.
3. Power Supply: DC 10V to 42V, 10W approx. directly or  
AC 100/110/220V, 50 to 60Hz, 1 phase (Rectifier needed)
4. Coating Color: 2.5GY-5/1.5 Newtone No.5 (Cabinet)  
(IF-5000) N3.0 Dark grey, mat (Front Panel)



## 2. Data Flow in Interface Unit

The following figure shows data flow and examples of equipments which can be connected to each terminal on the interface unit.

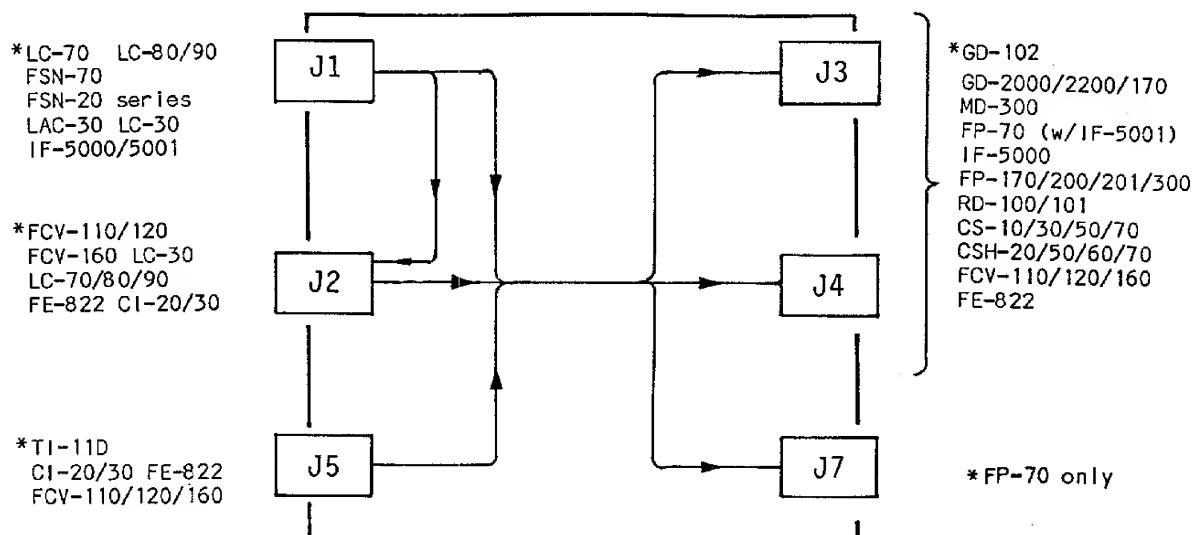

For easy description, it is assumed that equipments marked \* above are connected on each terminal. Navigational data(position in Lat./Long. etc.) obtained by LC-70 is indicated on FCV-110/120 & GD-102 and printed out on FP-70. Water depth detected by FCV-110/120 and water temperature detected by TI-11D can be read on GD-102 and FP-70.

It should be taken into account that no water temperature is displayed on FCV-110/120 in this case. If water temperature is required on FCV display, additional interface unit is requested or the temperature indicator TI-11D is needed to be connected directly to LC-70 as below.

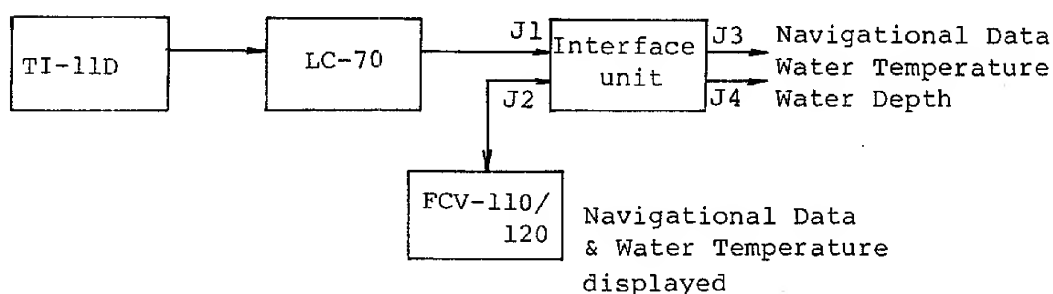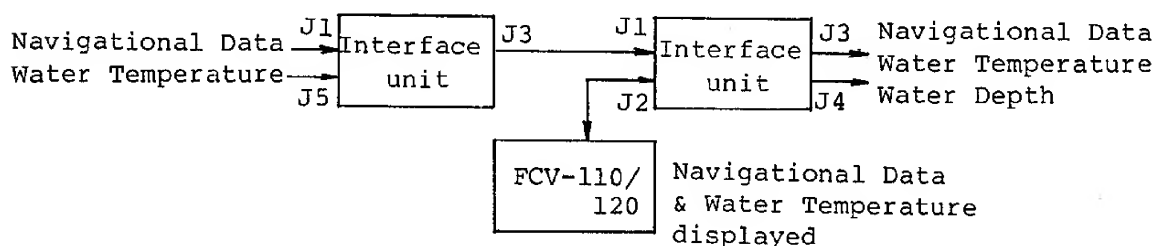

## 3. Complete Set

### A) Separate Type(IF-5000)

No.	Name	Type	Weight	Q'ty	Remarks
1	Main Unit	IF-5000	2.5kg	1	W/Bracket  Fuse, F7161 1.5A, 3 pcs.
2	Installation Materials			1 set	
3	Spare Parts			1 set	

### B) Built-in Type(IF-5001)

No.	Name	Type	Weight	Q'ty	Remarks
1	Interface PCB	14P0020		1	
2	Installation Materials			1 set	


## 4. Installation Materials

No.	Name	Specifications	Q'ty	
			IF-5000	IF-5001
1	Mounting Bracket	RUA-1003	1	
2	Knob Bolt	KT-B, M6x10	2	
3	Fibre Washer	M6	2	
4	Woodscrew	ø4.8x25	4	
5	Flat Washer	M5	4	
6	Washerhead Screw	M3x8		5
7	Jumper W/connectors	6P-10P		1
8	Jumper W/connectors	5P-5P		1
9	Connector W/wires	10P	5	
10	Connector W/wires	6P	1	
11	Crimp-on Lug	FV2-S3.3	8	
12	Plastic Tube (Heat-shrink type)	ø3x0.25x0.5m	1	
13	Cable	CO-SPEVV-SB-C, 0.2sqx5P	10m	
14	Label		1	



## OPERATION

In normal operation, the operator is only requested to turn on/off the POWER switch.

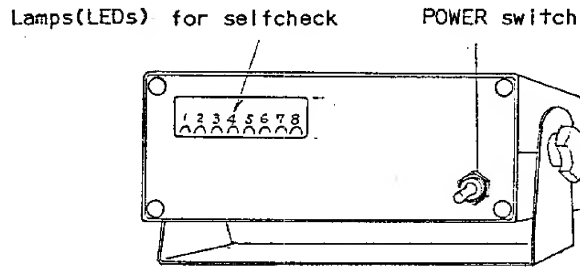


Interface Unit IF-5000

### 1. Mode Selection on J5

Either Temperature Indicator or Current Indicator can be connected to J5 by changing the setting of DIP switch #1 on the interface PCB. Turning on (or off) the DIP switch #1 allows Temperature Indicator (or Current Indicator) to be connected to J5.

Note: POWER switch should be turned off, and on after changing the setting of DIP switch.

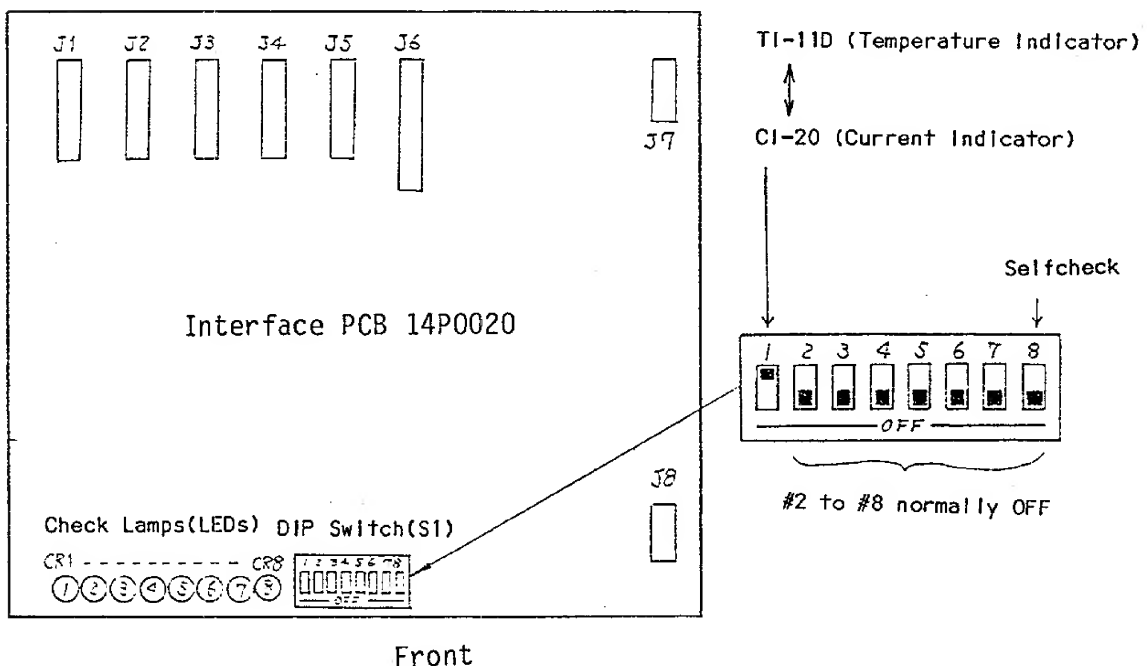

## 2. Selfcheck

If the unit does not function normally, perform the following selfcheck.

### Check of Memory Circuit (ROM/RAM)

ROM/RAM check can be performed automatically upon turning on the POWER switch.


If all the selfcheck lamps on the front panel blink three times at 1 sec interval and go off except the lamp #8, ROM/RAM is normal.

### Check of Memory Circuit (ROM/RAM) and Data Input Interface Circuit


By using the DIP switch #8 and check plugs, both ROM/RAM and data input interface circuit can be checked.

- (1) Turn on the DIP switch #8, then turn on the POWER switch.
- (2) All the selfcheck lamps blink three times at 1 sec interval, then lamps #1, #2 & #6 go off, #3, #4, #5 & #7 remain lighted, #8 keeps blinking with normal ROM/RAM.
- (3) Connect the check plugs shown below to the jacks J1, J2, J4 and J5.
- (4) If the lamps #3, #4 and #5 go off, the data input interface circuits (corresponding to jacks J1, J2 and J5 respectively) are normal. If abnormal function exists with the result of selfcheck being normal, it seems that the trouble is in the external navigator (NNSS, Ioran etc.) combined or on the data transfer line.

Jack Plug

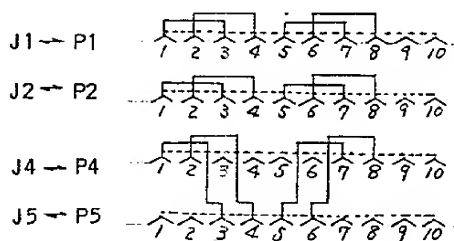

Check Plugs  
(to be arranged  
at the spot)

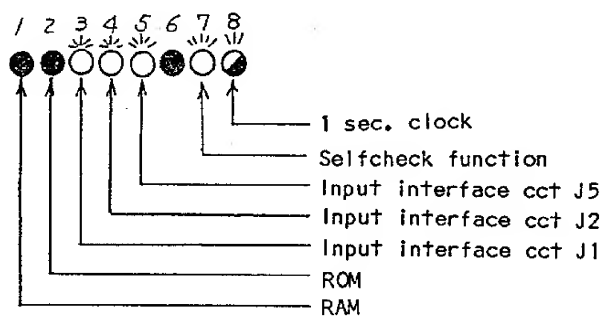

Check Lamps

## INSTALLATION


### 1. Mounting of IF-5000 (Separate type)

The unit should be located at dry and well ventirated place. It can be mounted with the mounting bracket in tabletop or overhead mount. Refer to page D-1 for the mounting dimensions.

### 2. Fitting of IF-5001 (Built-in type) in printer FP-70.

The following describes how to install IF-5001 into Printer FP-70.


- 1) Remove the top cover by loosening four screws at both sides of the printer.
- 2) Mount the interface PCB 14P0020 with five screws as in the figure below.
- 3) Make connections between interface PCB and the printer.  
J7/J8 on the interface PCB are connected to J2/J4 on the printer respectively with supplied cable.

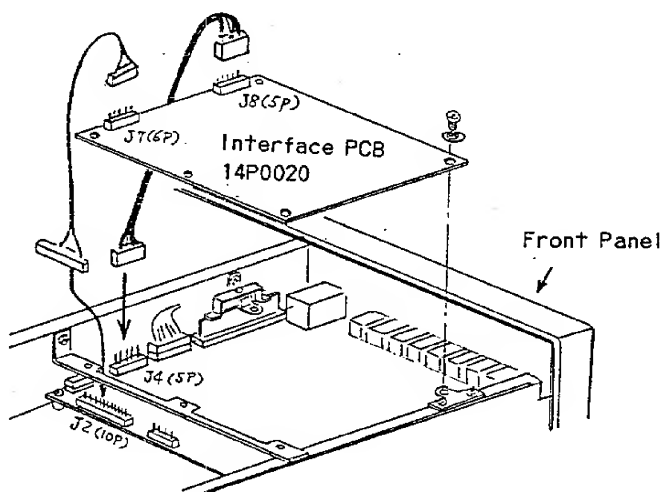

Printer FP-70 with Top  
Cover removed


## 3. Fabrication of Data Cable

Fabricate the data cables as below and solder NH connectors to the cable ends, referring to the cabling diagrams.

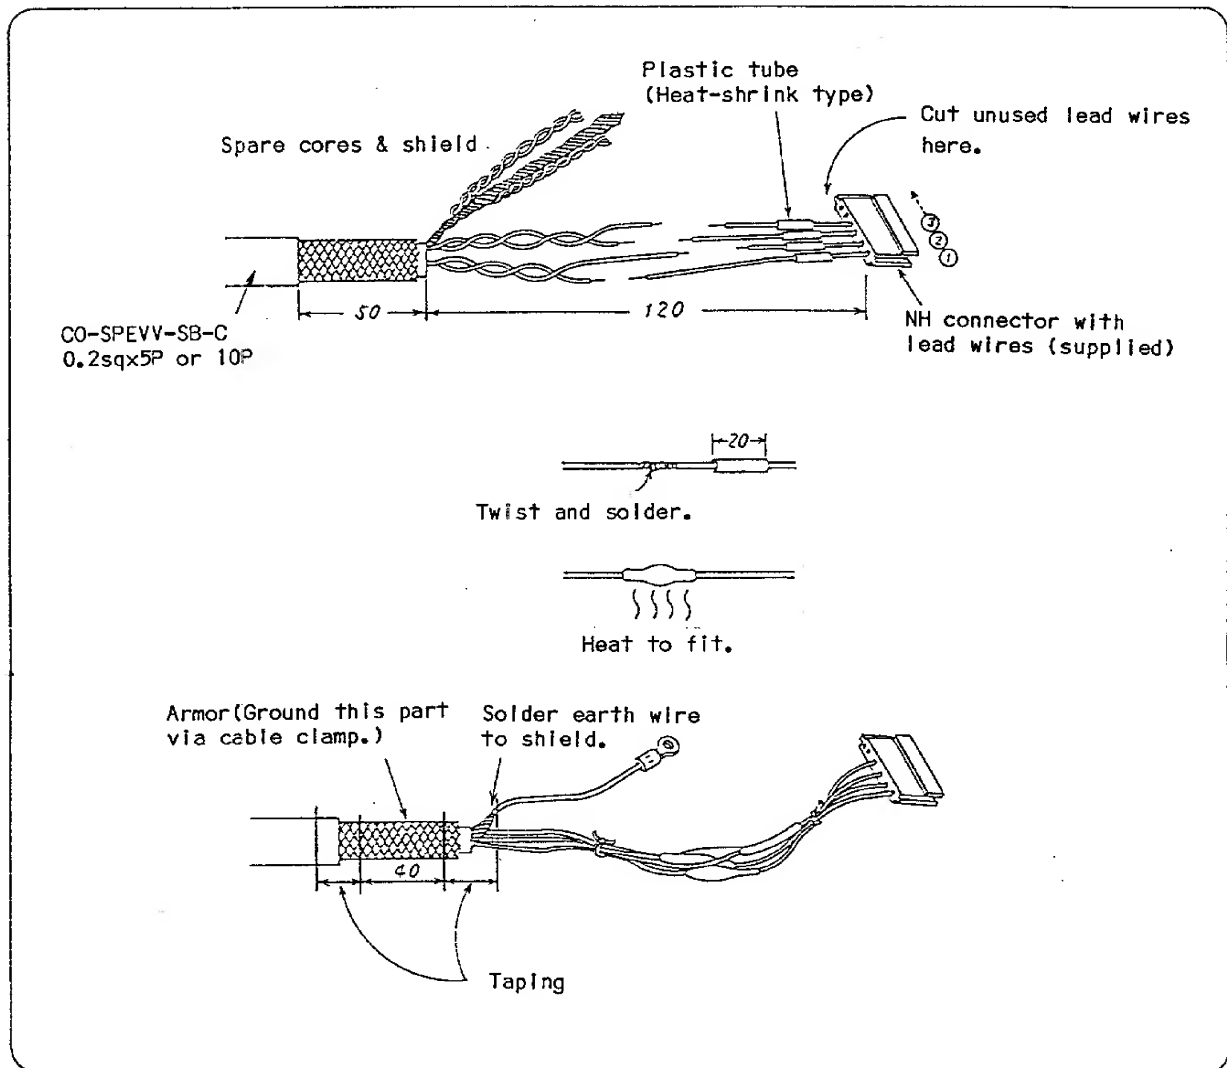


## 4. Connection


Connect the data cables to the respective jacks on the interface PCB and the power cable to the terminals #1 (+) and #2 (-) on the power supply PCB. Remove the top cover of IF-5000 to get access to jacks and terminals.

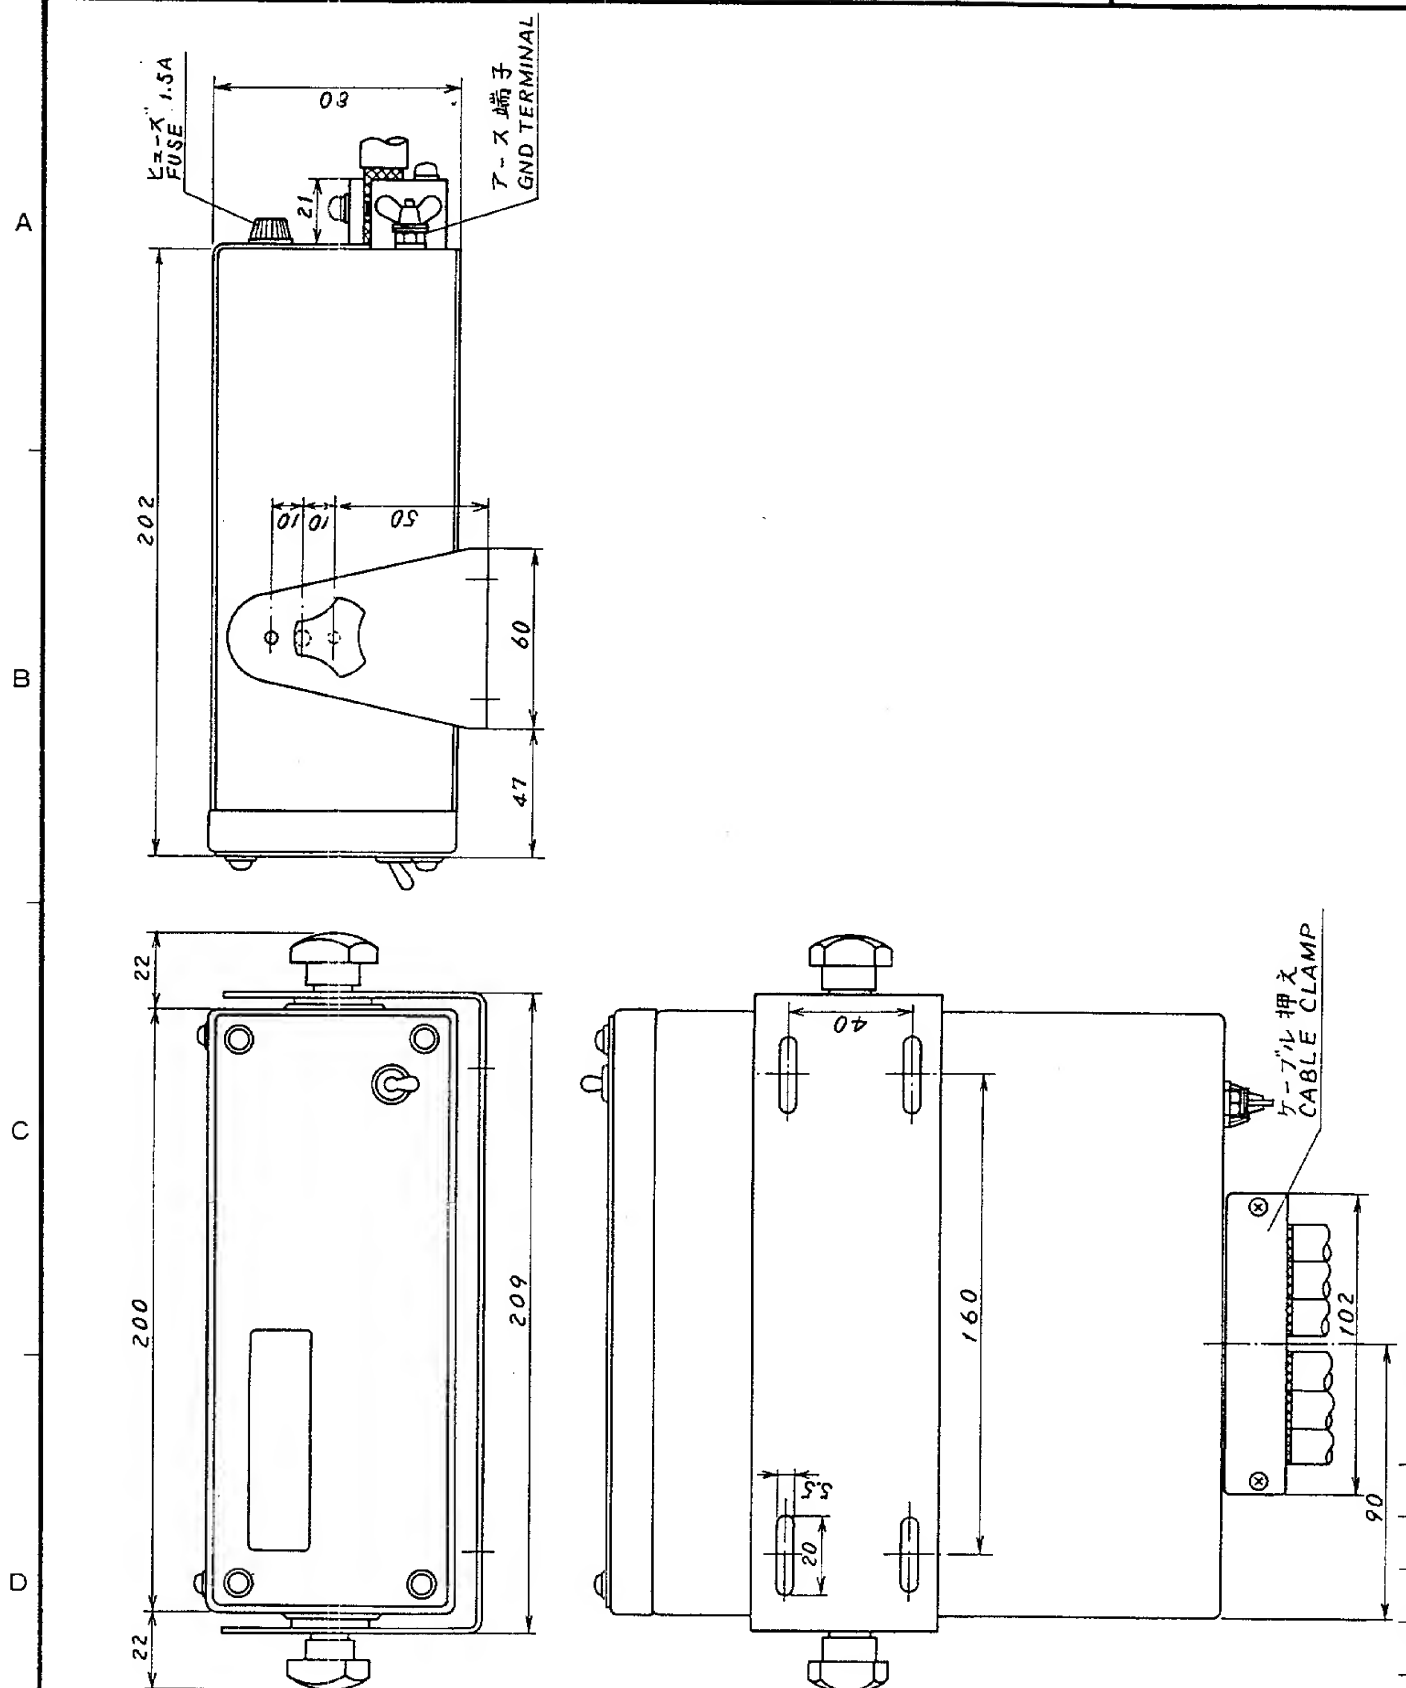

IF-5000/3300 SERIES		品番 ITEM	品名 NAME		材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	SEP. 14. '81 K. Kato	三角法 THIRD ANGLE PROJECTION			名称 TITLE	インターフェース・ユニット外觀図 INTERFACE UNIT		
検図 CHECKED	SEP. 14. '81 N	尺度 SCALE	1/2.5					
製図 DRAWN	SEP. 14. '81 H. Kato	重量 WEIGHT	2.5 kg		図番 DWG.NO.	C4274-001-B		

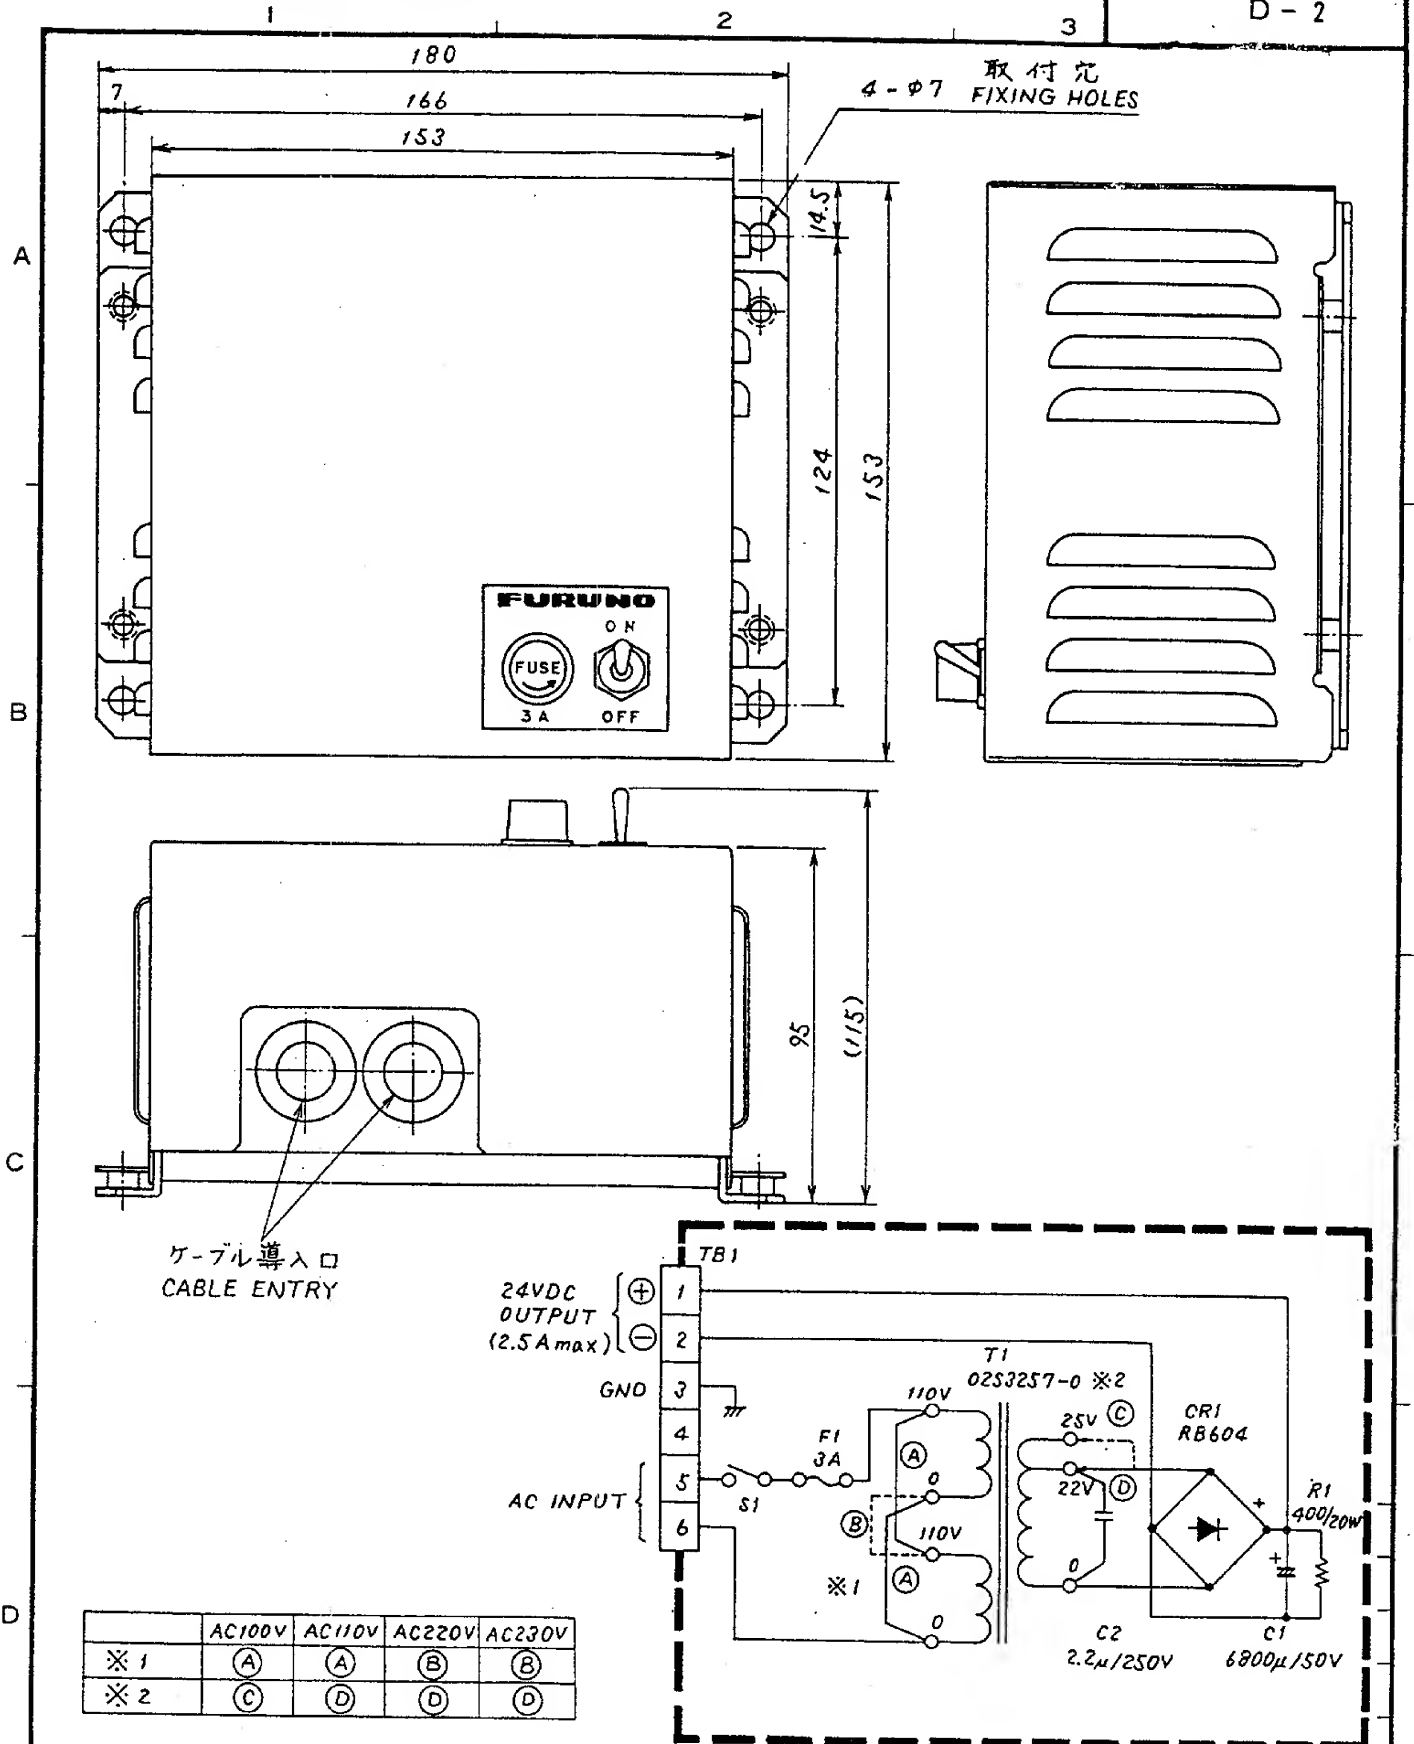


品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	JUN. 14 1974	三角法 THIRD ANGLE PROJECTION	名称 TITLE	PR-62 整流器外觀図 RECTIFIER UNIT	
検図 CHECKED	JUN. 14 1974	尺度 SCALE	1/2		
製図 DRAWN	6.1.1974	重量 WEIGHT	3 kg	図番 DWG.NO.	C 5 0 0 3 - 0 3 4 - C

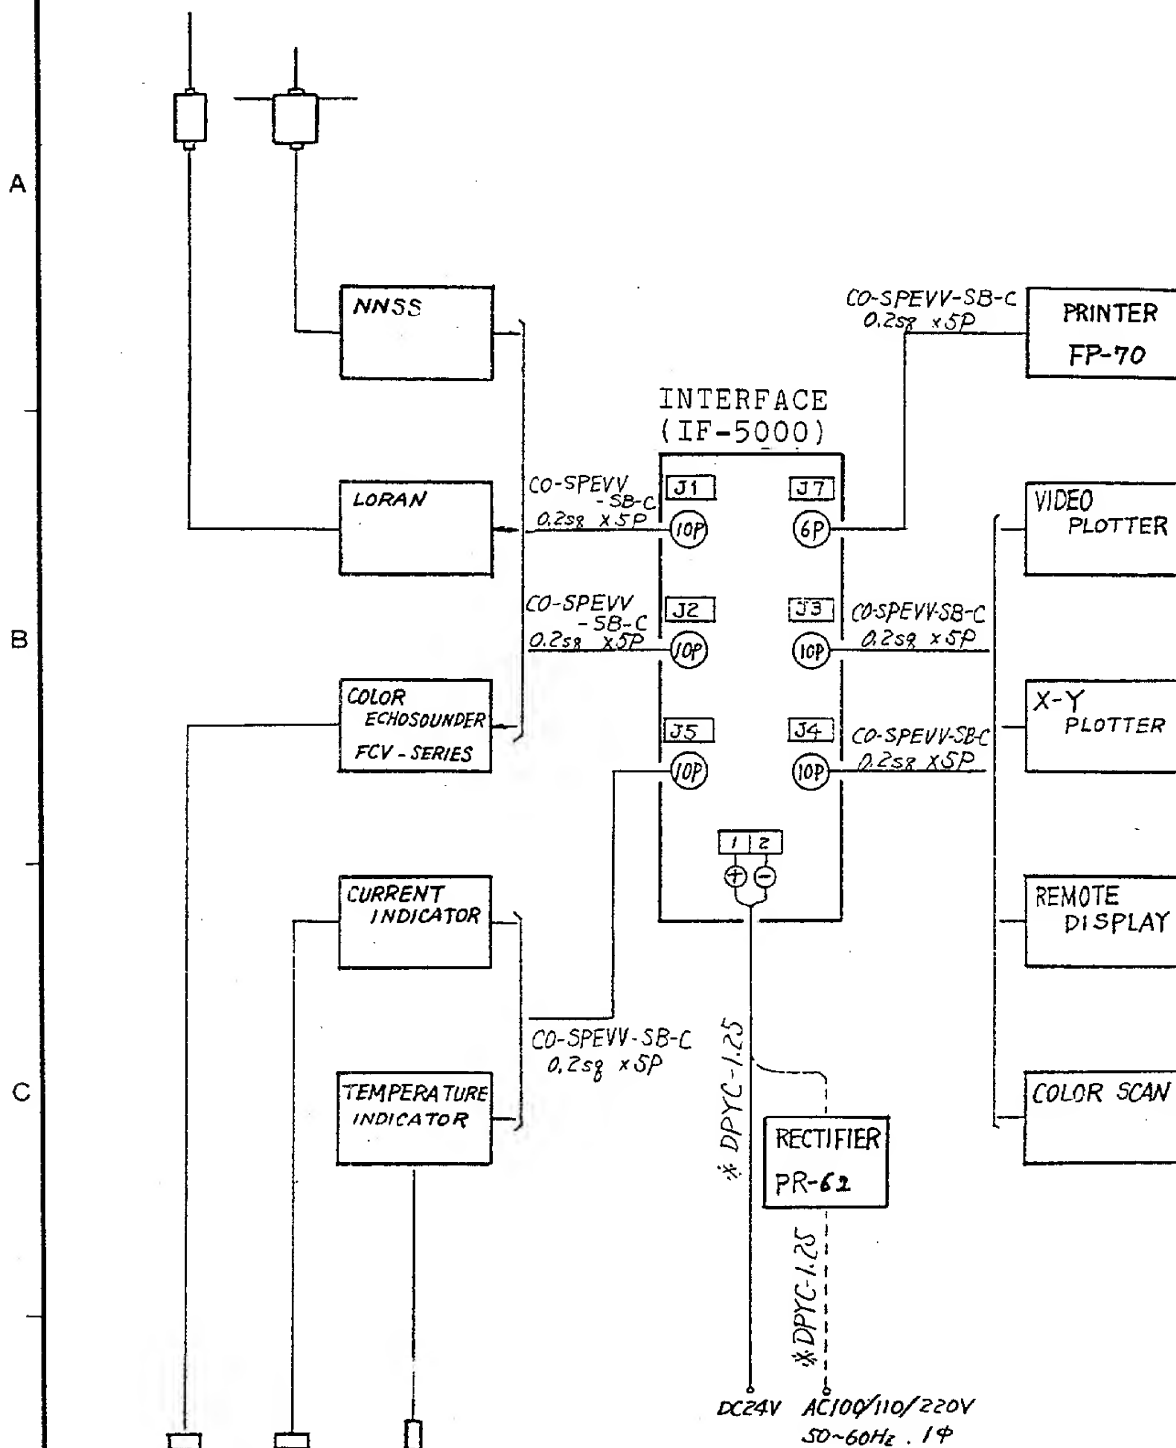

※ 造船所支給  
SHIPYARD SUPPLY

IF-5000		品 番 ITEM	品 名 NAME	材 質 MATERIAL	数 量 Q'TY	図 番 DWG.NO.	摘 要 REMARKS
承認 APPROVED	• •		三 角 法 THIRD ANGLE PROJECTION	名 称 TITLE インターフェースユニット相互連絡図  INTERFACE UNIT SYSTEM DIAGRAM			
検 図 CHECKED	• •		尺 度 SCALE				
製 図 DRAWN	• •		重 量 WEIGHT				
				kg		図 番 DWG.NO.	

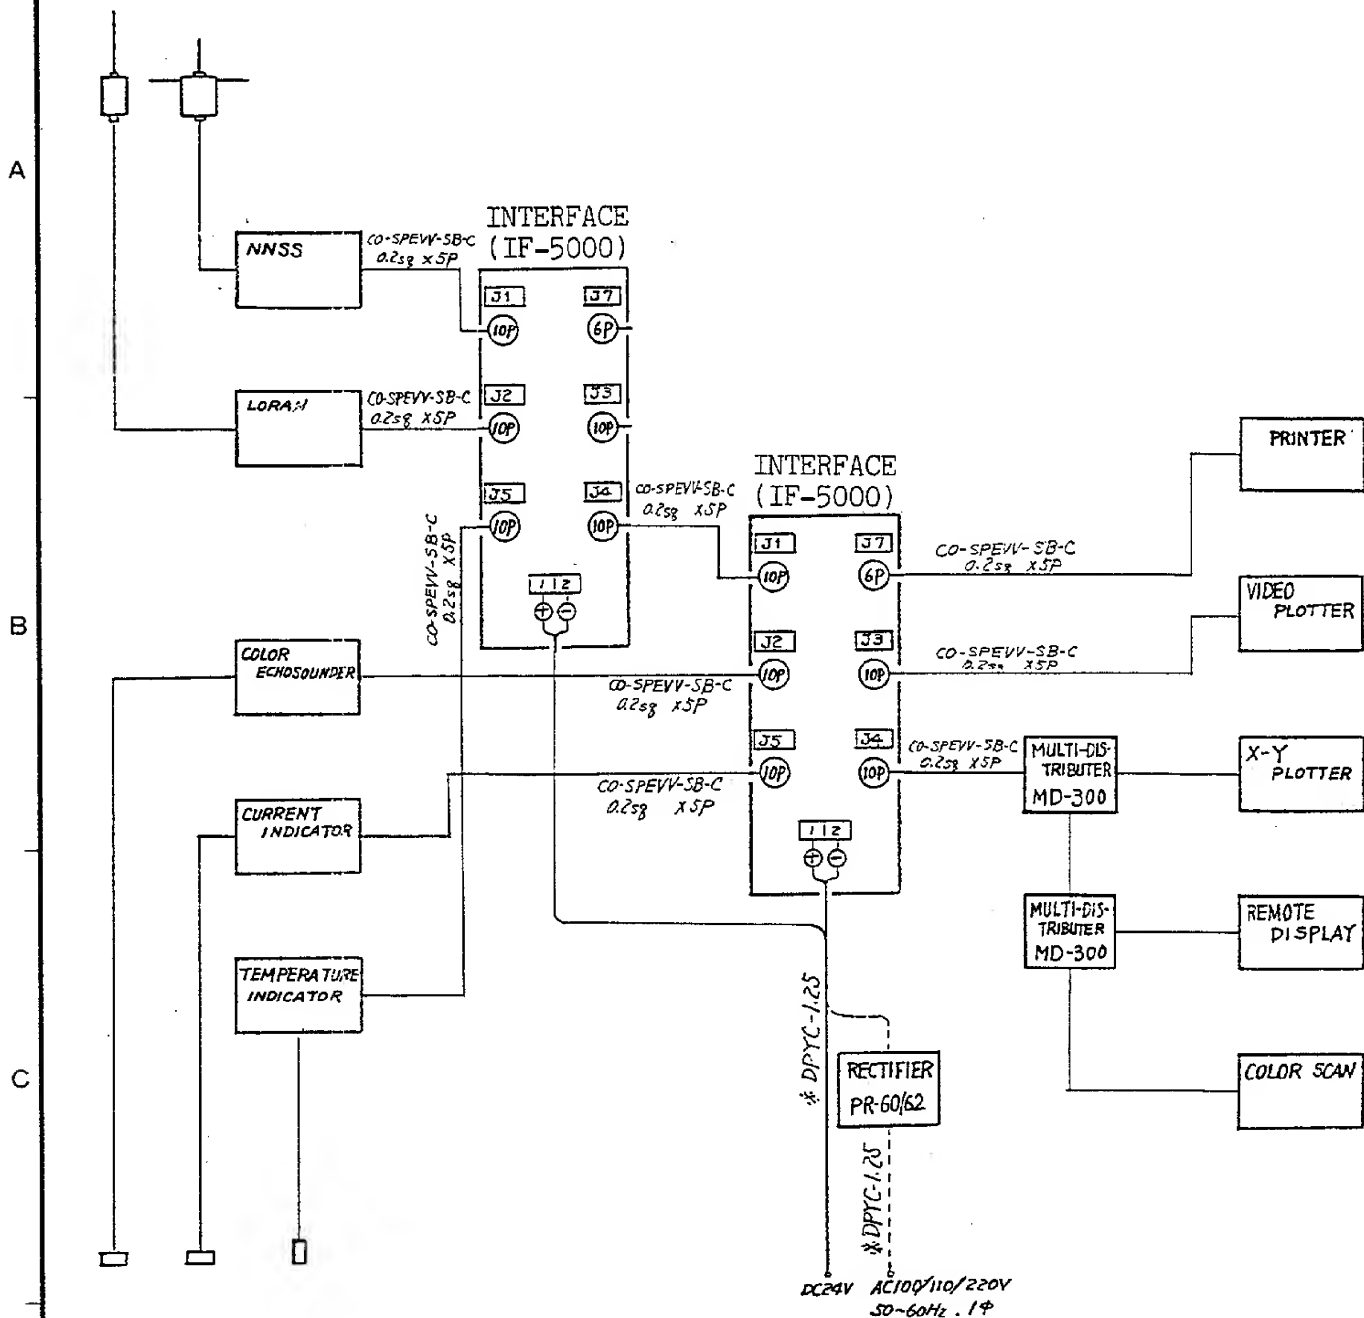


※造船所支給  
SHIPYARD SUPPLY

IF-5000

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	三角法 THIRD ANGLE PROJECTION	名称 INTERFACE UNIT SYSTEM DIAGRAM			
検図 CHECKED	尺度 SCALE	INTERFACE UNIT SYSTEM DIAGRAM			
製図 DRAWN	重量 WEIGHT	kg	図番 DWG.NO.		




## IF-5000 インタフェースユニット INTERFACE UNIT

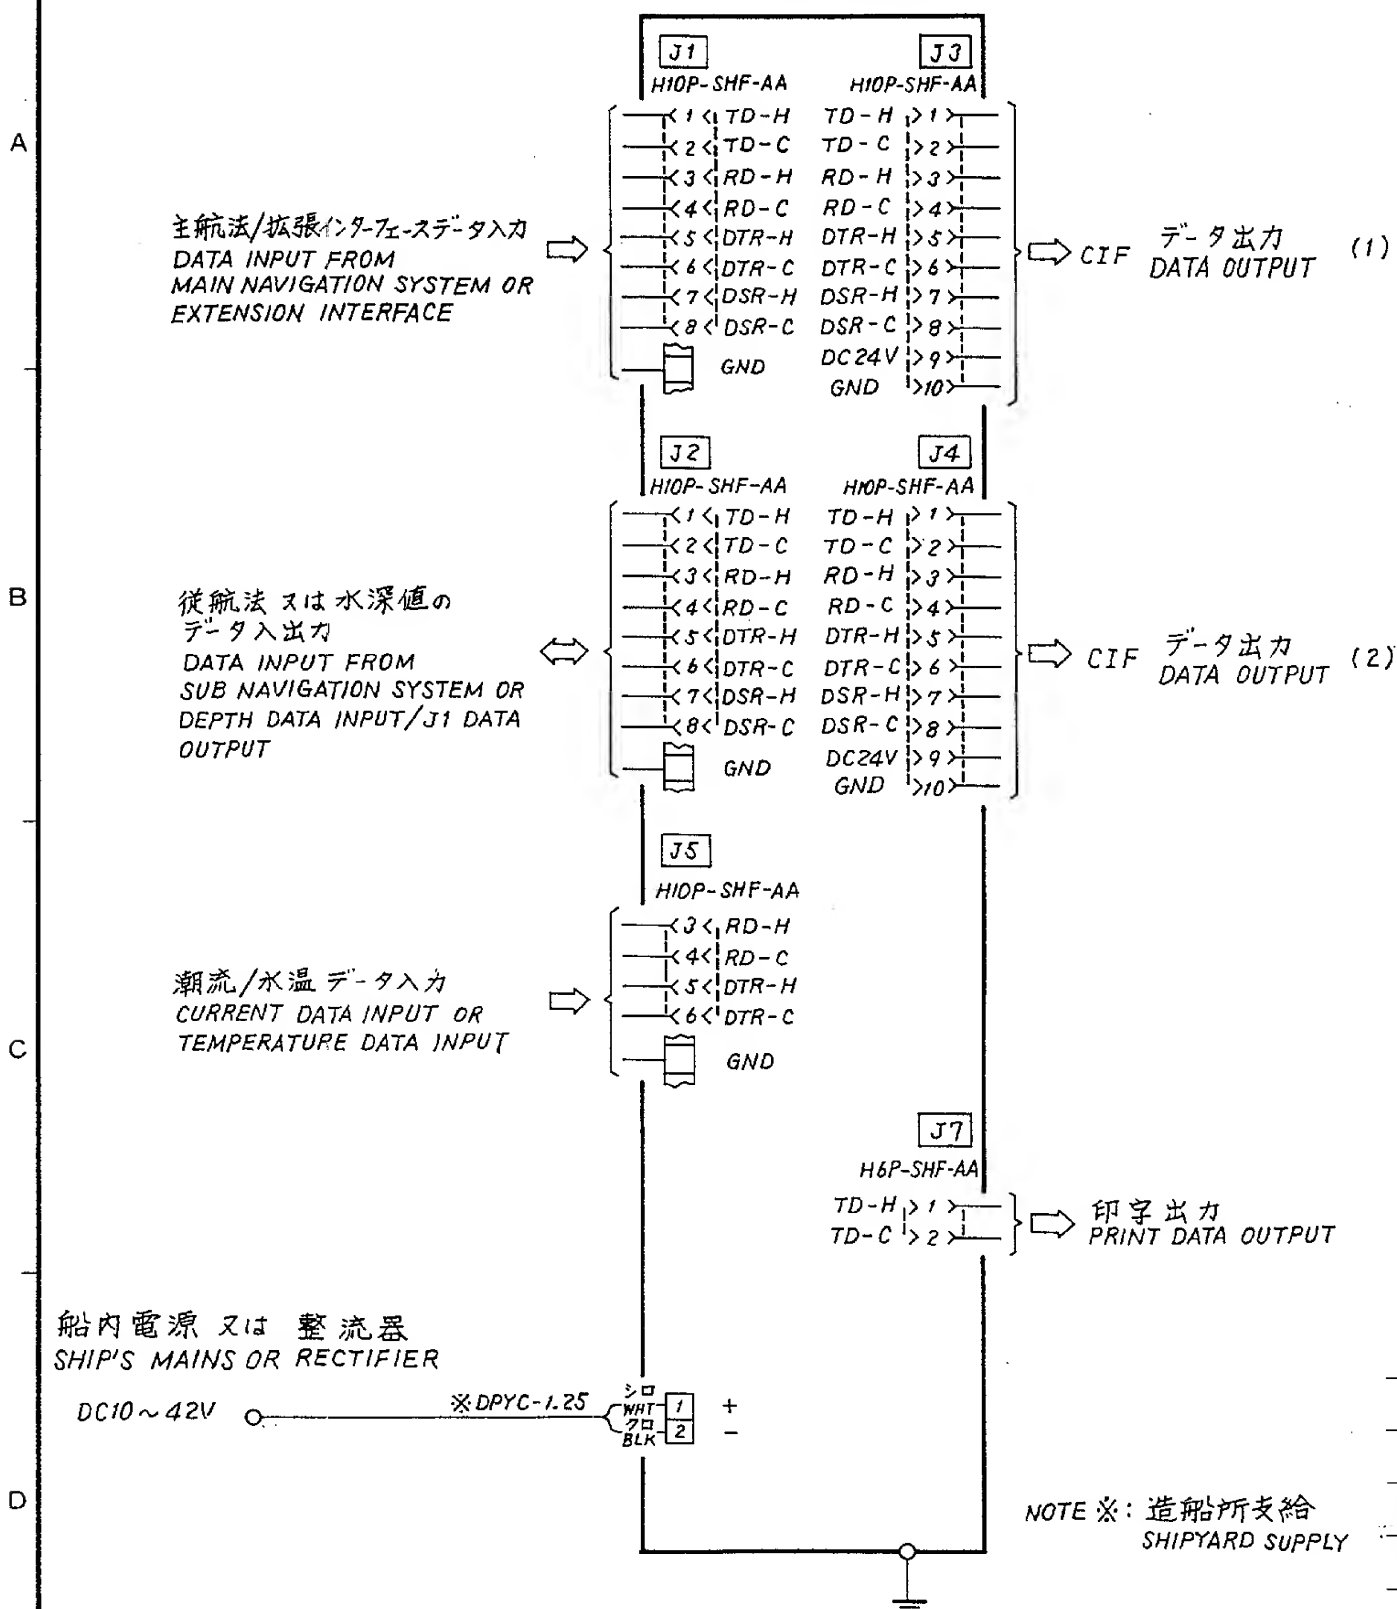


品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	FEB.20.'87 T. NAKANO	三角法 THIRD ANGLE PROJECTION	名称 TITLE	IF-5000 インタフェース入出力図 INTERFACE I/O CONNECTION	
検図 CHECKED	FEB.20.'87 I. Amano	尺度 SCALE			
製図 DRAWN	FEB.19.'87 M. Matsuoka	重量 WEIGHT	kg	図番 DWG.NO.	C4274-007-A

## FP-70/IF-5001 プリンター PRINTER

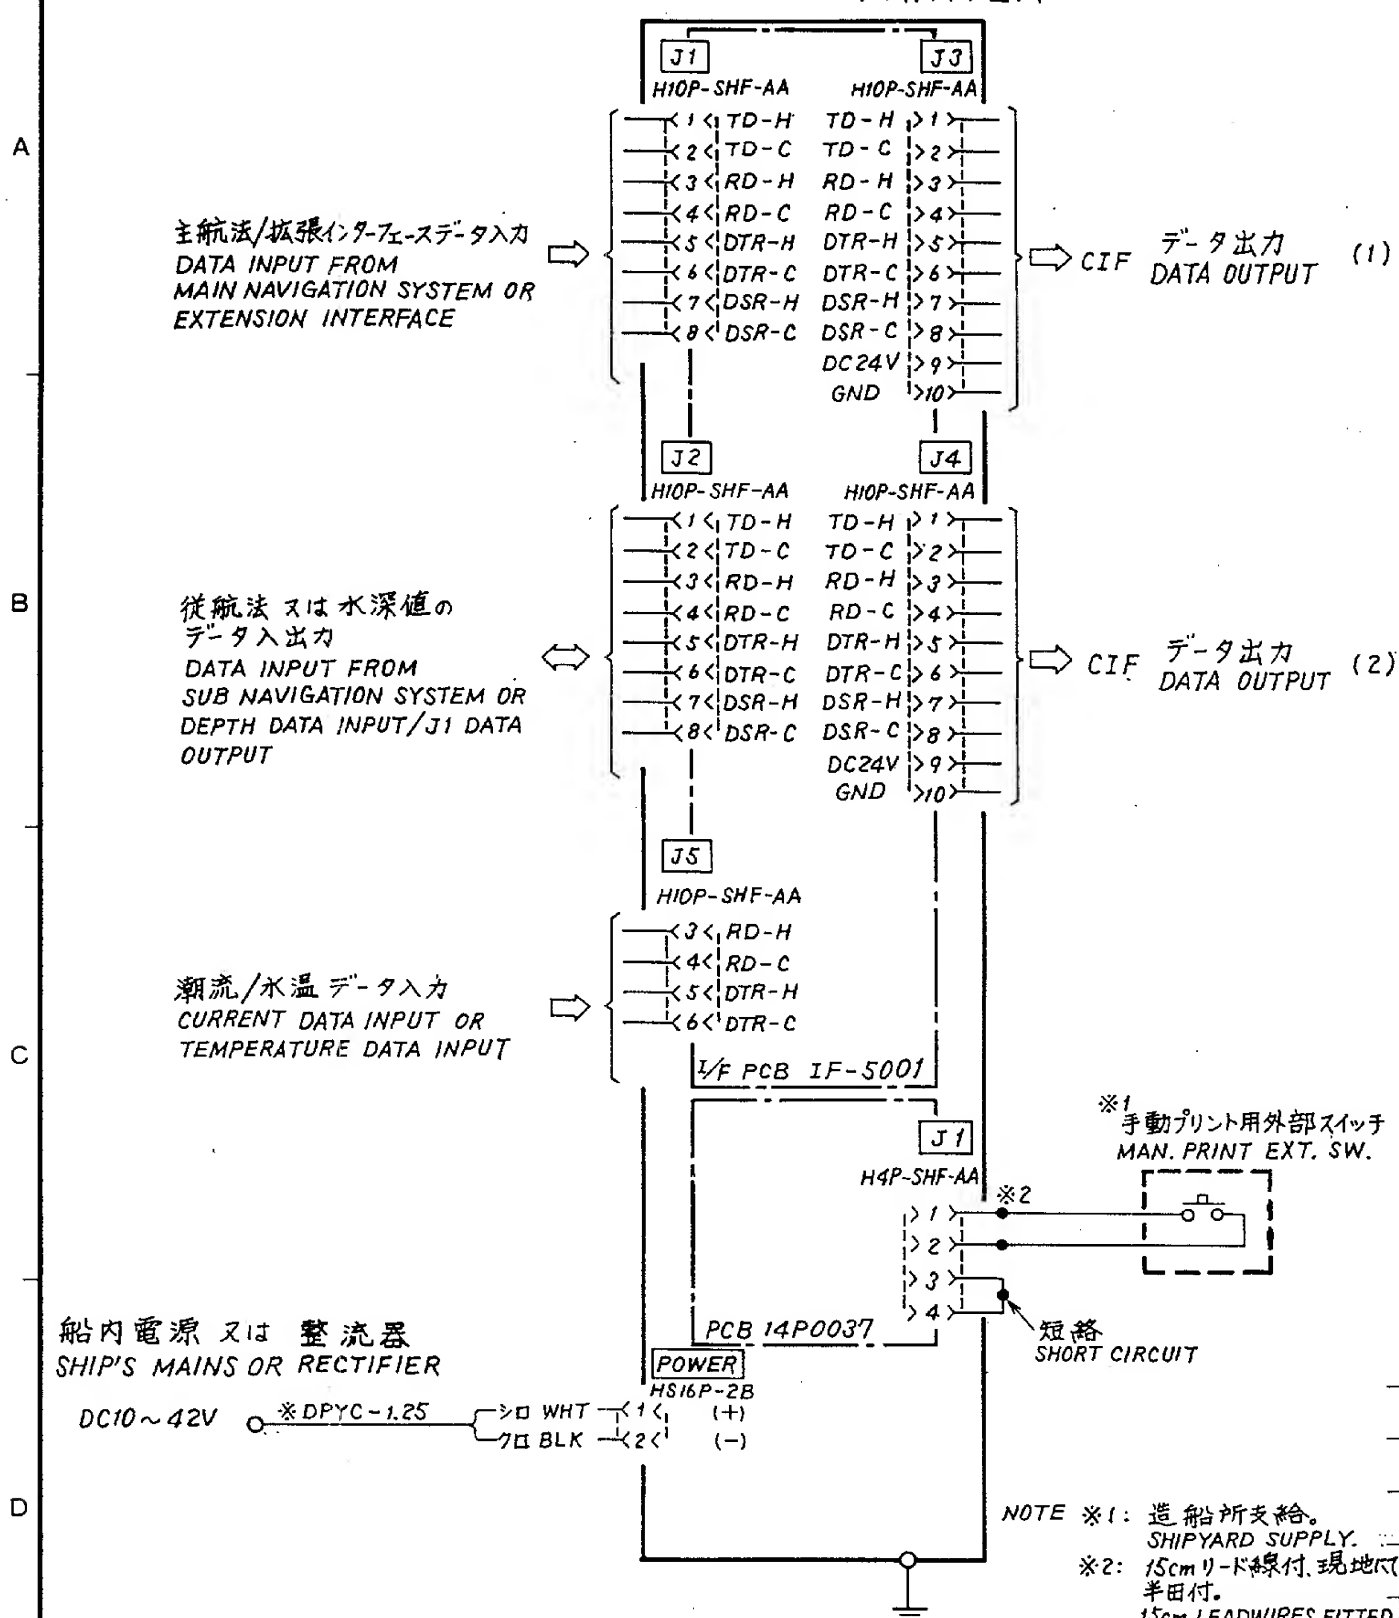














品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	FEB. 20. '87 T. NAKANO	三角法 THIRD ANGLE PROJECTION	名称 TITLE	図番 DWG.NO.	摘要 REMARKS
検図 CHECKED	FEB. 20. '87 I. Amano	尺度 SCALE	FP-70/IF-5001	C4272-009-A	プリンター入出力図 PRINTER I/O CONNECTION
製図 DRAWN	FEB. 19. '87 M. Matsuoka	重量 WEIGHT	kg		

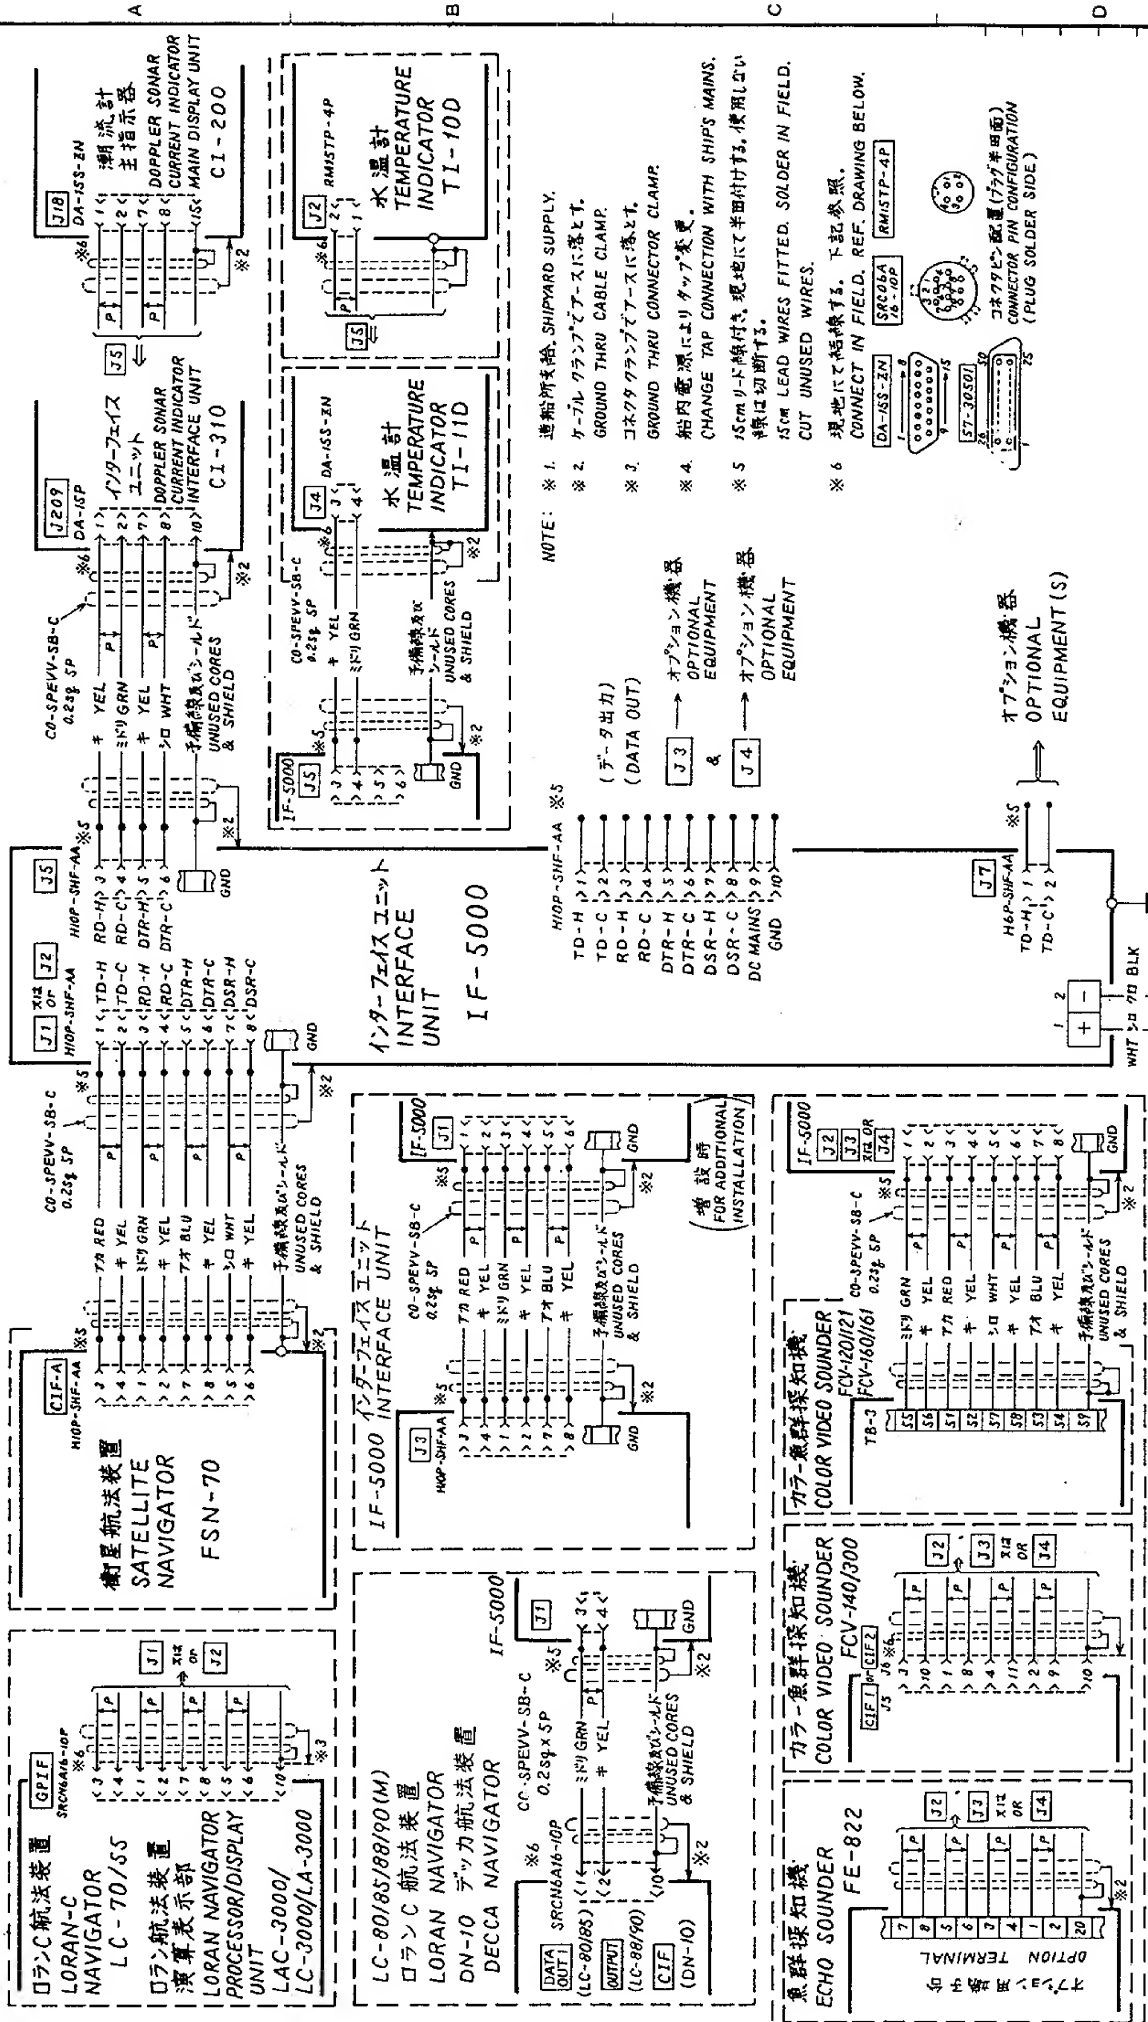


承認 APPROVED	品名 ITEM	品名 NAME	三 角 法 THIRD ANGLE PROJECTION	名 称 TITLE	材 質 MATERIAL	数 量 Q.TY	図 番 DWG.NO.	備 考 REMARKS
検査 CHECKED			度 SCALE	IF-5000				
製図 DRAWN			重 WEIGHT	INTERFACE UNIT				
			kg					

**FURUNO ELECTRIC CO., LTD.**



## プリンター PRINTER FP-70

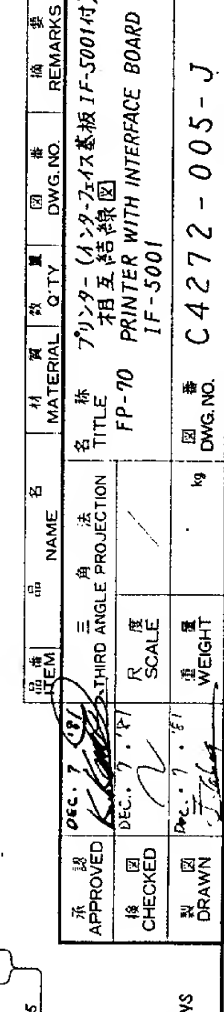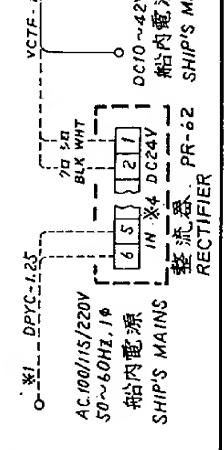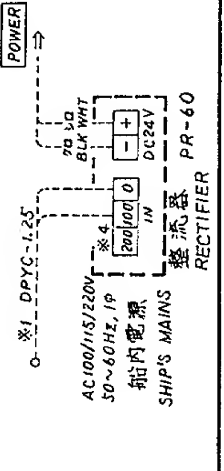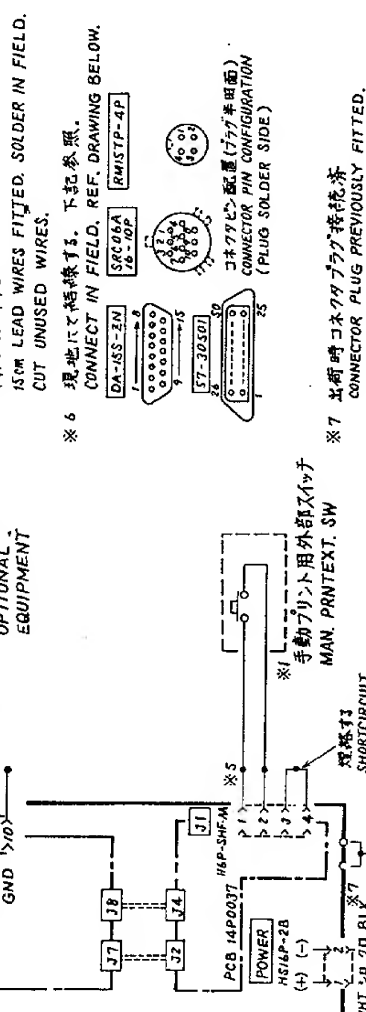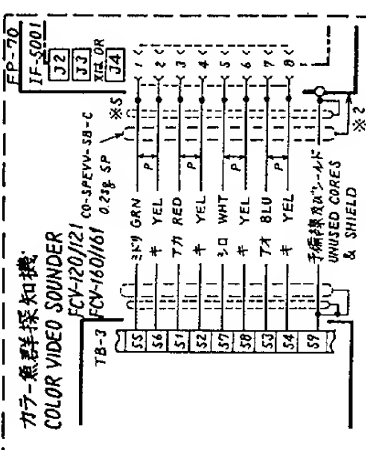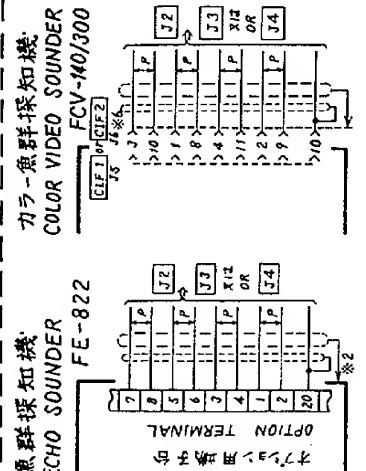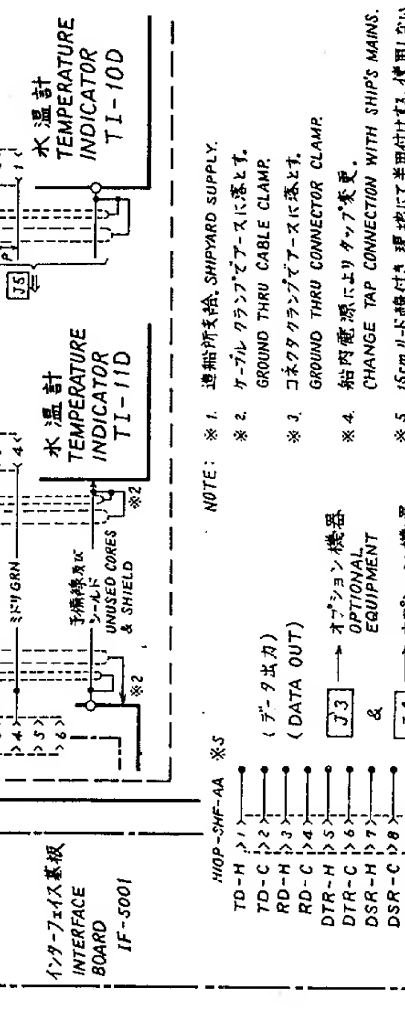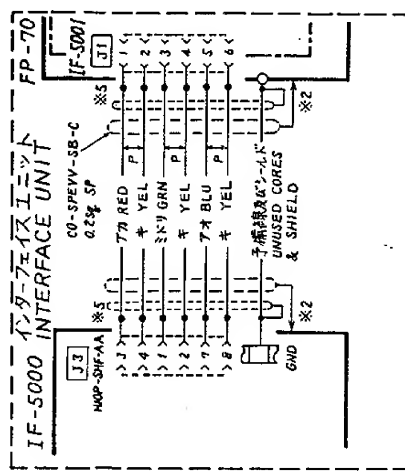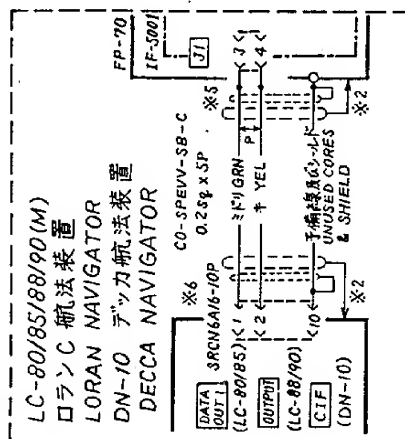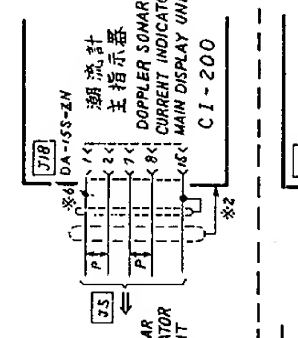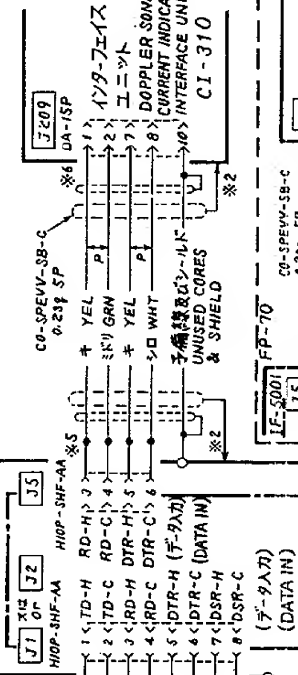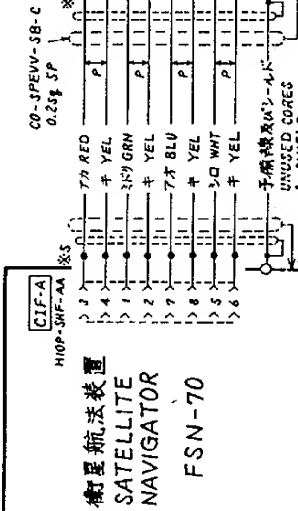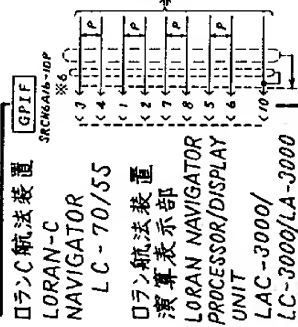

- NOTE:
1. 造船所支給, SHIPYARD SUPPLY.
  2. ガーブル クランプ アースに接点.
  3. コネクター クランプ アースに接点.
  4. 船内電源によりケーブル変更.
  5. 15cm リード線付き, 現地に半田付け. 使用しない線は切断す.
  6. 現地に半田付け. 下記参照.  
CONNECT IN FIELD, REF. DRAWING BELOW.

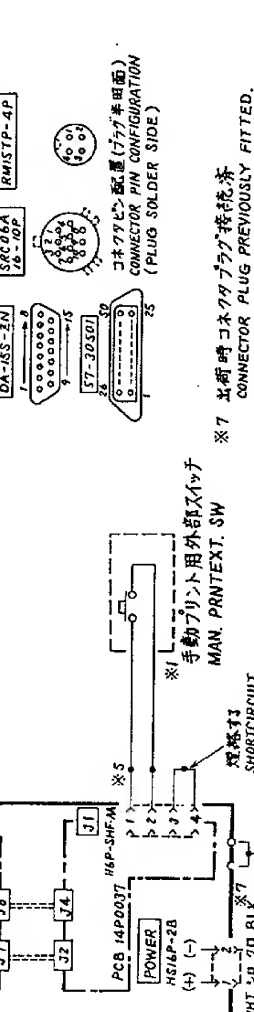

品名	品名	数量	単位	図番	備考
IF-5001	インターフェイスボード	1	枚	IF-5001	
FP-70	プリンター	1	台	FP-70	
TI-100	水温計	1	個	TI-100	
TI-110	水温計	1	個	TI-110	
TI-200	水温計	1	個	TI-200	
PR-60	整流器	1	個	PR-60	

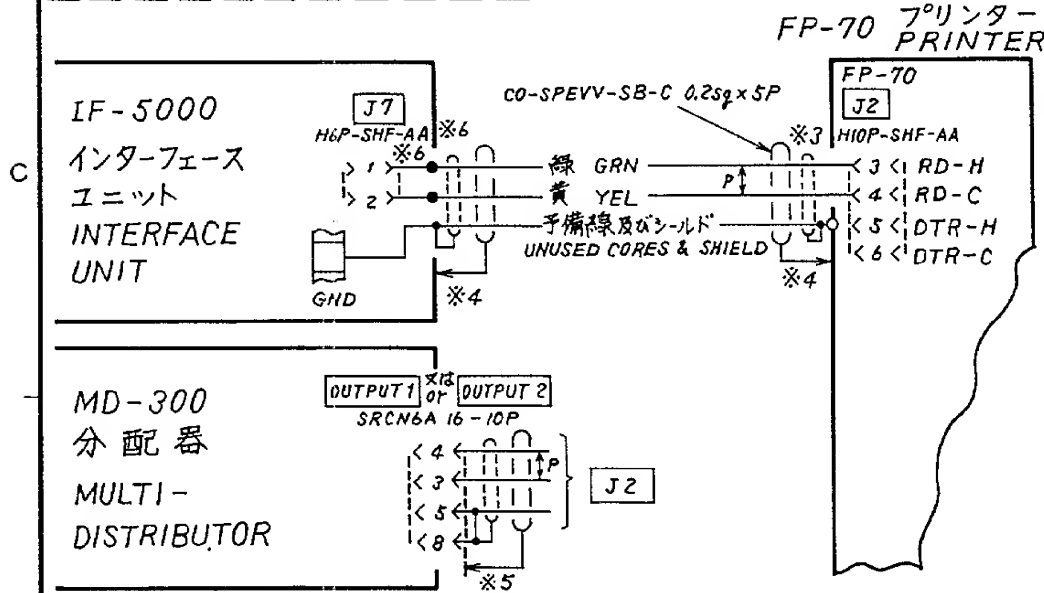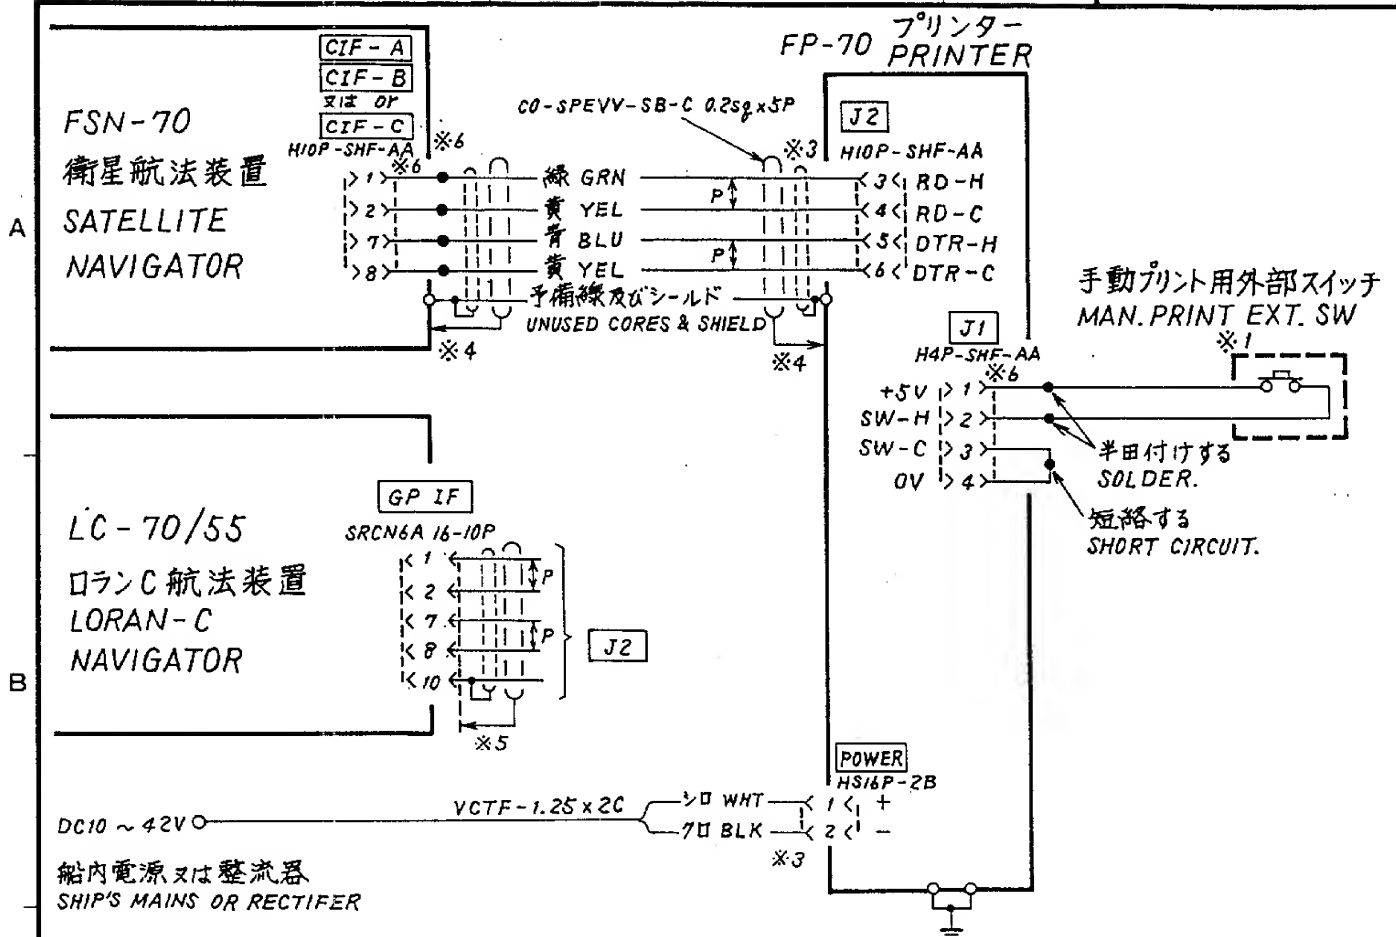

NOTE ※ 1. 造船所支給. SHIPYARD SUPPLY.

- ※ 3. 出荷時コネクタプラグ接続済. CONNECTOR PLUG FACTORY-WIRED.
- ※ 4. ケーブルクランプでアースに落とす. GROUND THRU CABLE CLAMP.
- ※ 5. コネクタクランプでアースに落とす. GROUND THRU CONNECTOR CLAMP.
- ※ 6. 15cm リード線付. 現地で半田付けする. 使用しない線は切断する. 15cm WIRES FITTED. SOLDER IN FIELD CUT UNUSED WIRES.


承認 APPROVED	MAR. 3 '87 T. YAKAWO	三角法 THIRD ANGLE PROJECTION	名称 TITLE	プリンター 相互結線図 FP-70 PRINTER INTERCONNECTION DIAGRAM
検図 CHECKED	Feb. 27 '87 I. Amano	尺度 SCALE		
製図 DRAWN	Feb. 28 '87 M. Matsuyama	重量 WEIGHT	kg	図番 DWG. NO. C4272-004-G

IF-5000/3300

インターフェース  
ユニット  
INTERFACE  
UNIT

J 3 or  
J 4

H10P-SHF-AA ※7

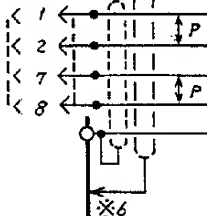

CO-SPEVV-SB-C  
0.2Sq x 5P

予備線及びシールド  
UNUSED CORES  
& SHIELD

(半田面)  
(SOLDER SIDE)



INPUT

SRCN6A16-10S

鎧装  
ARMOR

MD-300  
MD-500


分配器  
MULTI-DISTRIBUTER

FP-70

プリンター(IF-5001付)  
PRINTER(W/IF-5001)

J 3 or  
J 4

H10P-SHF-AA ※7

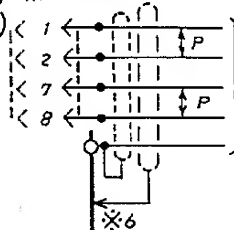

INPUT

MD-300  
MD-500

分配器  
MULTI-  
DISTRIBUTOR

OUTPUT

SRCN6A16-10P

CO-SPEVV-SB-C  
0.2Sq x 5P

ミドリ GRN  
キ YEL

予備線及びシールド  
UNUSED CORES  
& SHIELD

INPUT

SRCN6A16-10S

鎧装  
ARMOR

MD-300  
MD-500

分配器  
MULTI-DISTRIBUTER

※4. ツイストペア  
TWISTED PAIR

※5. コネクタのクランプでアースする。  
GROUND THRU CONNECTOR CLAMP.

※6. ケーブルクランプでアースする。  
GROUND THRU CABLE CLAMP.

※7. 15cm リード線付き、現地に半田付けする。  
15cm LEAD WIRES FITTED, SOLDER IN FIELD.  
使用しない線は切断する。  
CUT UNUSED WIRES.

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
------------	------------	----------------	------------	---------------	---------------



承認 APPROVED	JULY. 20. '87 T. NAKANO	三角法 THIRD ANGLE PROJECTION	名称 MD-300 分配器相互結線図 MD-500 MULTI DISTRIBUTOR		
検図 CHECKED	July. 20. '87 I. Amano	尺度 SCALE	(インターフェース → 入力側) (INTERFACE → INPUT SIDE)		
製図 DRAWN	July. 16. '87 H. Kuroki	重量 WEIGHT	図番 DWG.NO.	C4252-021-B	

A

MD-300  
MD-500  
分配器  
MULTI-DISTRIBUTER

OUTPUT

 SRCN6A16-10P

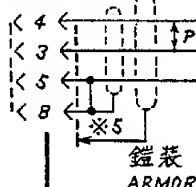

CO-SPEVV-SB-C  
0.25g x 5P

ミドリ GRN

キ YEL

予備線及びシールド  
UNUSED CORES  
& SHIELD


鎧装  
ARMOR

B

OUTPUT1

or

OUTPUT2

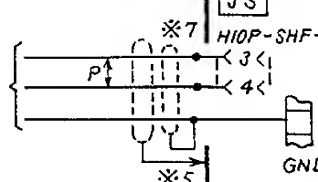

IF-5000  
インターフェースユニット  
INTERFACE UNIT

J1 or J2

H10P-SHF-AA

3<

4<

5<

GND

航法データ  
NAVIGATION DATA

J5

H10P-SHF-AA

3<

4<

5<

GND


潮流データ  
水温データ  
CURRENT DATA  
TEMPERATURE DATA

C

OUTPUT1

or

OUTPUT2

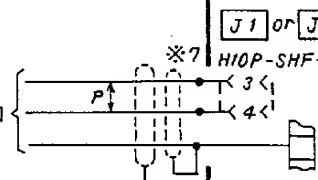

FP-70  
プリンター (IF-5001付)  
PRINTER (W/IF-5001)

J1 or J2

H10P-SHF-AA

3<

4<

5<

GND

航法データ  
NAVIGATION DATA

J5

H10P-SHF-AA

3<

4<

5<

GND

潮流データ  
水温データ  
CURRENT DATA  
TEMPERATURE DATA

D

※4. ツイストペア  
TWISTED PAIR

※5. コネクタのクランプでアースする。  
GROUND THRU CONNECTOR CLAMP.

※7. 15cm リード線付き。現地に半田付けする。  
使用しない線は切断する。  
15cm LEAD WIRES FITTED SOLDER IN FIELD.  
CUT UNUSED WIRES.

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
------------	------------	----------------	------------	---------------	---------------

承認 APPROVED	JULY. 17. '87 T. NAKANO	三角法 THIRD ANGLE PROJECTION	名称 MD-300 分配器相互結線図 MD-500 MULTI DISTRIBUTOR		
検図 CHECKED	JULY. 16. '87 I. Amano	尺度 SCALE	(出力側 → インターフェース) (OUTPUT SIDE → INTERFACE)		
製図 DRAWN	JULY. 16. '87 H. Kawanishi	重量 WEIGHT	kg	図番 DWG.NO.	C4252-020-B

## 電源基板 POWER BOARD

1B2 14P0021

1B1 14P0020

POWER

1B3P1

1B3P2

1B3F1

1B3F2

1B3F3

1B3F4

1B3F5

1B3F6

1B3F7

1B3F8

1B3F9

1B3F10

1B3F11

1B3F12

1B3F13

1B3F14

1B3F15

1B3F16

1B3F17

1B3F18

1B3F19

1B3F20

1B3F21

1B3F22

1B3F23

1B3F24

1B3F25

1B3F26

1B3F27

1B3F28

1B3F29

1B3F30

1B3F31

1B3F32

1B3F33

1B3F34

1B3F35

1B3F36

1B3F37

1B3F38

1B3F39

1B3F40

1B3F41

1B3F42

1B3F43

1B3F44

1B3F45

1B3F46

1B3F47

1B3F48

1B3F49

1B3F50

1B3F51

1B3F52

1B3F53

1B3F54

1B3F55

1B3F56

1B3F57

1B3F58

1B3F59

1B3F60

1B3F61

1B3F62

1B3F63

1B3F64

1B3F65

1B3F66

1B3F67

1B3F68

1B3F69

1B3F70

1B3F71

1B3F72

1B3F73

1B3F74

1B3F75

1B3F76

1B3F77

1B3F78

1B3F79

1B3F80

1B3F81

1B3F82

1B3F83

1B3F84

1B3F85

1B3F86

1B3F87

1B3F88

1B3F89

1B3F90

1B3F91

1B3F92

1B3F93

1B3F94

1B3F95

1B3F96

1B3F97

1B3F98

1B3F99

1B3F100

1B3F101

1B3F102

1B3F103

1B3F104

1B3F105

1B3F106

1B3F107

1B3F108

1B3F109

1B3F110

1B3F111

1B3F112

1B3F113

1B3F114

1B3F115

1B3F116

1B3F117

1B3F118

1B3F119

1B3F120

1B3F121

1B3F122

1B3F123

1B3F124

1B3F125

1B3F126

1B3F127

1B3F128

1B3F129

1B3F130

1B3F131

1B3F132

1B3F133

1B3F134

1B3F135

1B3F136

1B3F137

1B3F138

1B3F139

1B3F140

1B3F141

1B3F142

1B3F143

1B3F144

1B3F145

1B3F146

1B3F147

1B3F148

1B3F149

1B3F150

1B3F151

1B3F152

1B3F153

1B3F154

1B3F155

1B3F156

1B3F157

1B3F158

1B3F159

1B3F160

1B3F161

1B3F162

1B3F163

1B3F164

1B3F165

1B3F166

1B3F167

1B3F168

1B3F169

1B3F170

1B3F171

1B3F172

1B3F173

1B3F174

1B3F175

1B3F176

1B3F177

1B3F178

1B3F179

1B3F180

1B3F181

1B3F182

1B3F183

1B3F184

1B3F185

1B3F186

1B3F187

1B3F188

1B3F189

1B3F190

1B3F191

1B3F192

1B3F193

1B3F194

1B3F195

1B3F196

1B3F197

1B3F198

1B3F199

1B3F200

1B3F201

1B3F202

1B3F203

1B3F204

1B3F205

1B3F206

1B3F207

1B3F208

1B3F209

1B3F210

1B3F211

1B3F212

1B3F213

1B3F214

1B3F215

1B3F216

1B3F217

1B3F218

1B3F219

1B3F220

1B3F221

1B3F222

1B3F223

1B3F224

1B3F225

1B3F226

1B3F227

1B3F228

1B3F229

1B3F230

1B3F231

1B3F232

1B3F233

1B3F234

1B3F235

1B3F236

1B3F237

1B3F238

1B3F239

1B3F240

1B3F241

1B3F242

1B3F243

1B3F244

1B3F245

1B3F246

1B3F247

1B3F248

1B3F249

1B3F250

1B3F251

1B3F252

1B3F253

1B3F254

1B3F255

1B3F256

1B3F257

1B3F258

1B3F259

1B3F260

1B3F261

1B3F262

1B3F263

1B3F264

1B3F265

1B3F266

1B3F267

1B3F268

1B3F269

1B3F270

1B3F271

1B3F272

1B3F273

1B3F274

1B3F275

1B3F276



## REVISION RECORD OF OPERATOR'S/INSTALLATION MANUAL

MODEL: IF-5000/5001

PUBLICATION NO.: OM-E4274-0

REV. NO.	DATE	REVISED PAGE	DETAILS	PERSON IN CHG.
A		—	First Edition	
N	'97.1	i, ii iii S-3 S-4 S-5 S-6 S-7 S-8 S-9 S-10 S-11~S-14	PL記述追加 A-3"付 C4274-003-F → C4274-007-A C4272-005-J → C4272-009-A C4272-004-G → C4274-003-F C4247-001-J → C4272-005-J C4245-005-D → C4272-004-G C4271-005-E → C4252-021-B C4252-002H → C4252-020-B C4249-001-J → C4274-005-A 図面削除	E43